

LOANABLE WILDLIFE CAMERAS

USER GUIDE

Getting started


- Install 6 AA batteries - full instructions on reverse of this card
- Install SD Card - full instructions on reverse of this card
- Select a location you wish to place the camera in your garden
- Power On camera at location by moving Power/Mode Switch to 'ON' position
- Mount camera using tree strap
- The camera will start recording using the pre-set settings
- Settings can be changed at any time by moving Power/Mode Switch to 'SETUP' position and pushing the 'MENU' button
- To view your records, remove SD Card and insert into a computer or laptop.

Scan here to view
full user manual



Reminder: Do not attempt to use any bait or food to lure animals to the camera.

Camera Parts and Controls

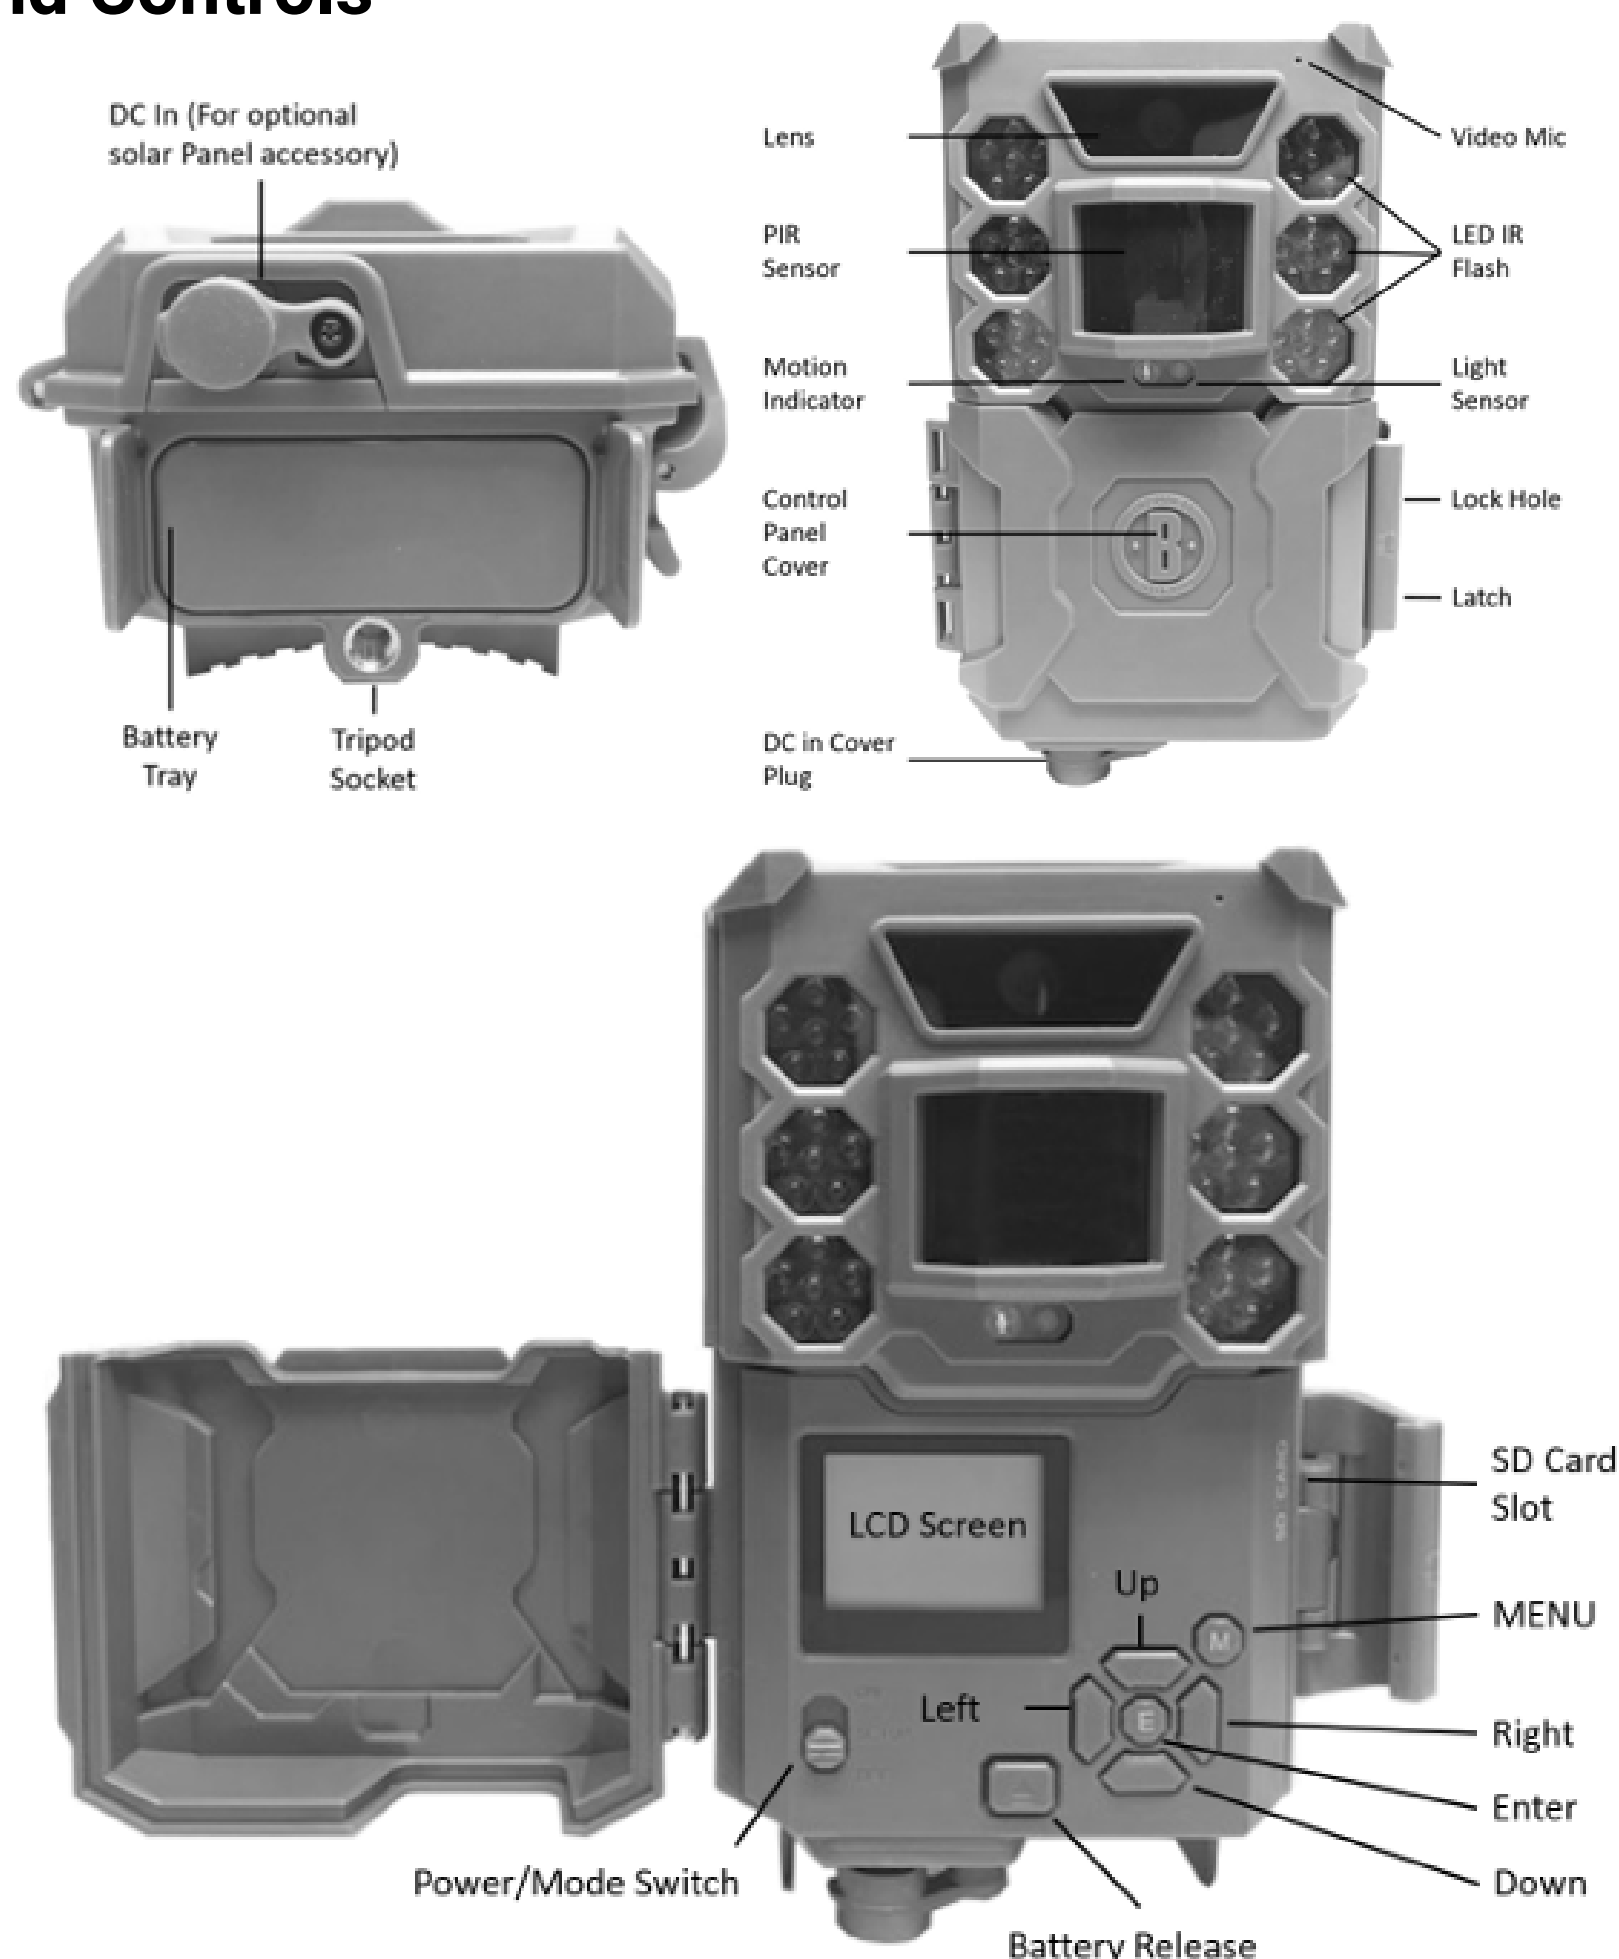

Loading the Batteries

- Open the latch on the right side of the camera
- Ensure the Camera is switched off
- Press the battery release button
- The battery tray will drop out the bottom of the camera
- The tray will stop about 1cm out of the device to prevent the tray from falling to the ground
- Pull out the tray, you will need to apply a little pressure when pulling
- Install all 6 AA rechargeable batteries
- Push tray back in until you hear it click

Note: Please recharge batteries before returning the camera to the library



Inserting and removing the SD Card


- Open the latch on the right side of the camera
- Ensure the camera is switched off
- Insert SD Card into the card slot with the SD Card label side upwards (see right image)
- Push the card in until you hear it click
- To remove the SD Card, gently push in the card
- Card will pop out of the card slot about 4-5mm

Note: You can use the SD Card provided or your own SD Card with a maximum 32GB capacity. The SD Card provided will be cleared when returned to the library.



Attaching the Strap

- Push one end of the strap through the two brackets on the back of the camera.
- Wrap the strap around a tree trunk and thread the end of the strap through the buckle
- Pull the end of the strap firmly so there is no slack left

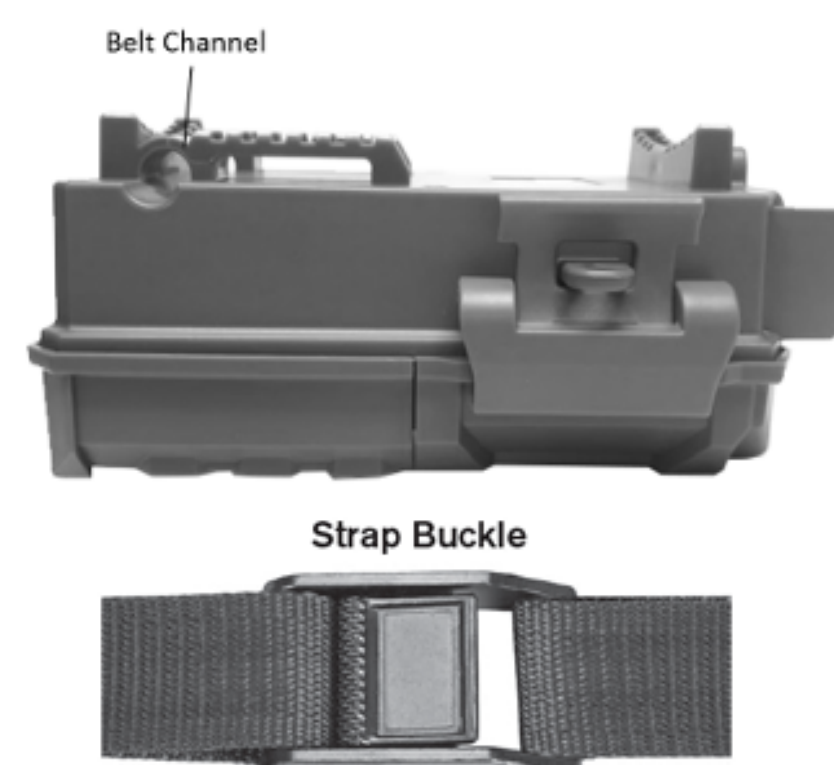

Camera Support

Having trouble? Contact us at library@melville.wa.gov.au or call 9364 0138.

Wildlife Identification Service

Have you captured footage of wildlife you can't identify?

Send your footage to Piney Lakes Environmental Education Centre at environmental.education@melville.wa.gov.au or call 9364 0790.

